


RETAINING WALL

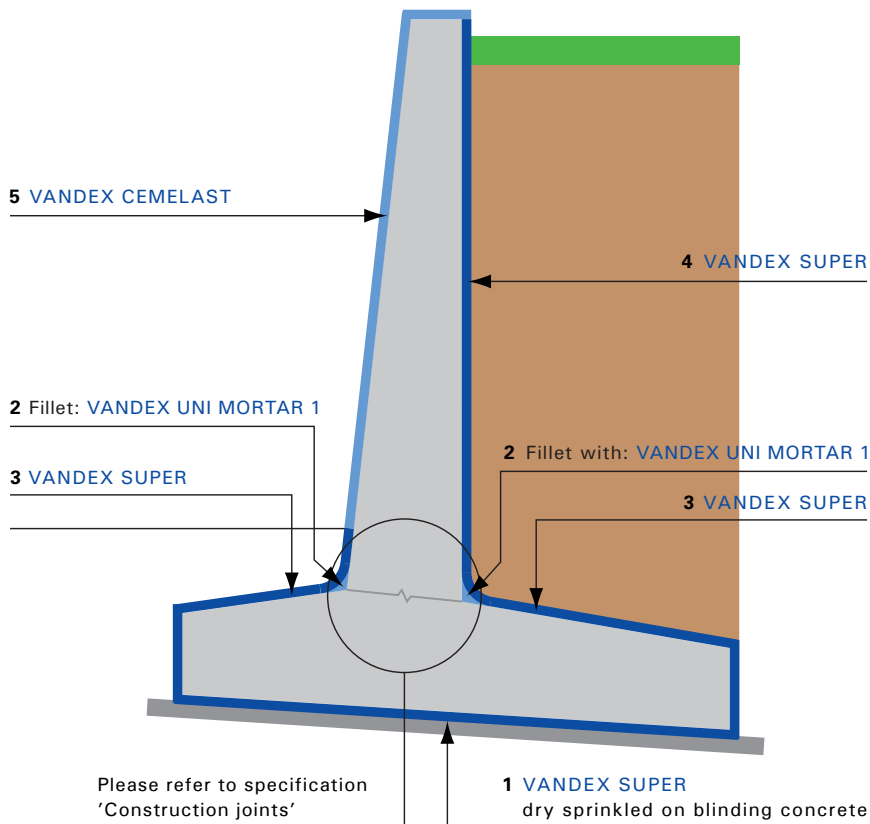

Application Instructions

- 1 Apply one coat of VANDEX SUPER to the prewetted blinding concrete, just prior to pouring the concrete.
- 2 Apply an angle fillet with suitable mortar, preferably VANDEX UNI MORTAR 1.
- 3 Apply one coat of VANDEX SUPER to the horizontal areas.
- 4 Apply two coats of VANDEX SUPER to the vertical surface on backfilled side.
- 5 Apply two coats of VANDEX CEMELAST as surface protection onto exposed surface.

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.



EUCLID CANADA



Looking for more information?

Please call us toll-free at 1-877-210-442 (North York office) or 1-800-667-0920 (Saint Hubert office), or visit www.euclidchemical.com.

Outside Canada: Vandex International Ltd · P.O. Box · CH-4501 Solothurn/Switzerland
+41 32 626 36 36 · info@vandex.com · www.vandex.com